ENG

Cuppon


STILO **5** STILO **15**

Remote Control
User Manual



cuppon.com.tr

Product Code	STILO 5 & STILO 15
Battery Voltage	3.7 V
Battery Capacity	120 mA
Battery Type	Lithium Polymer
Battery Charging Method	Charges via USB-C.
Frequency	433,92 MHz
Code Structure	Fix Code
Number Of Channels	5 channels + group / 15 channels + group
Working Distance	30-50 meter
Area of Use	Shutters, blinds, automation

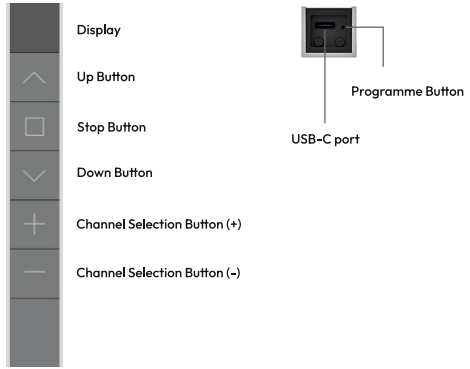

DESCRIPTION AND FUNCTIONS OF THE CONTROL BUTTONS

Up Button
This button activates the ON, UP, or INCREASE functions of the connected device.
Down Button
This button activates the OFF, DOWN, or DECREASE functions of the connected device.
Stop Button
This button activates the STOP function of the connected device.
Channel Selection Button (+) / Channel Selection Button (-)
The channel selection button (+) switches to the next channel, while the channel selection button (-) switches to the previous channel.
Programme Button
It is used only during the pairing process for tubular motors.

CONTROL SETTINGS MENUS

⚠ The timeout period is 20 seconds. Each time any button is pressed, the duration will automatically be extended by another 20 seconds.

Channel Number Setting Menu
To access the menu settings, press and hold the program button on the remote control for 3 seconds. In the menu entry screen, the current number of channels will be displayed.

To change the number of channels, press the stop button. When the channel number starts flashing on the screen, use the (+) or (-) buttons to select the desired number of channels between 0 and 15.

When the desired number of channels is shown on the remote screen, press the stop button again to confirm your selection.

REMOTE CONTROL SETTINGS MENUS

Battery Menu
To access the menu settings, press and hold the program button on the remote control for 3 seconds. In the menu, use the UP button to navigate to the Battery Menu. There are three different indicator options available in this menu.
• Battery level indicator
• Battery voltage
• Battery percentage value
The stop button is used to switch between the indicators available in the battery menu.

Charging Menu
To access the menu settings, press and hold the program button on the remote control for 3 seconds. In the menu, use the UP button to navigate to the Charging Menu.
When the USB-C connection is not established, the screen will display “USB-C Not Connected.” Once the USB-C connection is made, the charging voltage will be shown on the screen.

Product Information Menu
To access the menu settings, press and hold the program button on the remote control for 3 seconds. In the menu, use the UP button to navigate to the Product Information Menu. On this screen, the software version, version date, and the manufacturer’s logo of the product will be displayed.

Cuppon
move precise_

Manufacturing Company
Sinus Elektronik San. ve Tic. Ltd. Şti.

Revision Date: 06.01.2025 / Review No: 01

TR

Cuppon


STILO **5** STILO **15**

Kumanda
Kullanım Kılavuzu



cuppon.com.tr

Ürün Kodu	**STILO 5 & STILO 15**
Batarya Voltajı	**3.7 V**
Batarya Kapasitesi	**120 mA**
Batarya Tipi	**Lityum Polimer**
Batarya Şarj Yöntemi	**USB-C ile şarj edilebilir.**
Frekans	**433,92 MHz**
Kod Yapısı	**Fix Code**
Kanal Sayısı	**5 Kanal + Grup / 15 Kanal + Grup**
Uzaktan Algılama Mesafesi	**30-50 metre**
Kullanım Alanı	**Panjur, kepenk, otomasyon**

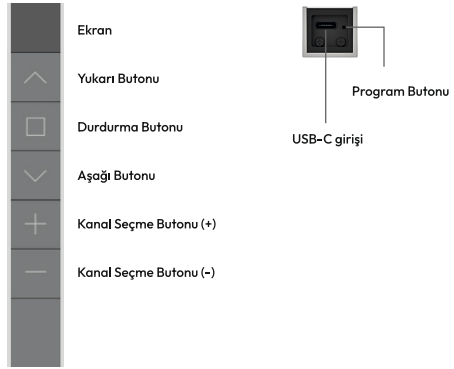

KUMANDA BUTONLARININ TANIMI VE İŞLEVLERİ

Yukarı Butonu
Bağlı cihazın açılma / yukarı / artış fonksiyon işlemlerinin gerçekleştirilmesini sağlayan butondur.
Aşağı Butonu
Bağlı cihazın kapatma / aşağı / azaltma fonksiyon işlemlerinin gerçekleştirilmesini sağlayan butondur.
Durdurma Butonu
Bağlı cihazın durdurma fonksiyon işleminin gerçekleştirilmesini sağlayan butondur.
Kanal Seçme Butonu (+) / Kanal Seçme Butonu (-)
Kanal seçme butonu (+) bir sonraki kanala, kanal seçme butonu (-) bir önceki kanala geçişi sağlamaktadır.
Program Butonu
Kumanda ayarlarının yapılabildiği menüye erişimi sağlayan butondur.

KUMANDA AYAR MENÜLERİ

⚠ Zaman aşımı süresi 20 saniyedir. Herhangi bir butona basıldığında süre otomatik olarak 20 saniye daha uzayacaktır.

Kanal Sayısı Ayarlama Menüsü
Menü ayarlarına girebilmek için kumandada bulunan program butonuna 3 saniye basılı tutunuz. Menü giriş ekranında; mevcut kanal sayısı görüntülenecektir.

Kanal sayısını değiştirmek için durdurma butonuna basınız. Ekranda kanal sayısı yanıp sönmeye başladığında, (+) veya (-) butonlarını kullanarak 0-15 arasında istediğiniz kanal sayısını seçiniz.

İstediğiniz kanal sayısını kumanda ekranında gördüğünüzde, durdurma butonuna basınız ve seçimi onaylayınız.

KUMANDA AYAR MENÜLERİ

Batarya Menüsü
Menü ayarlarına girebilmek için kumandada bulunan program butonuna 3 saniye basılı tutunuz. Menü girişinde, yukarı butonunu kullanarak batarya menüsüne geliniz. Bu menüde üç farklı gösterge seçeneği bulunmaktadır.
• Batarya seviye göstergesi
• Batarya voltajı
• Batarya yüzde değeri
Durdurma butonu ile batarya menüsünde bulunan göstergeler arasında geçiş yapılmaktadır.

Şarj Menüsü
Menü ayarlarına girebilmek için kumandada bulunan program butonuna 3 saniye basılı tutunuz. Menü girişinde, yukarı butonunu kullanarak şarj menüsüne geliniz.
USB-C bağlantısı yapılmadığında ekranda “USB-C Not Connected” yazısı görüntülenecektir. USB-C bağlantısı yapıldığında ise ekranda şarj voltajı görüntülenecektir.

Ürün Bilgi Menüsü
Menü ayarlarına girebilmek için kumandada bulunan program butonuna 3 saniye basılı tutunuz. Menü girişinde yukarı butonunu kullanarak ürün bilgi menüsüne geliniz. Bu menü ekranında; ürüne ait yazılım versiyonu, versiyon tarihi ve üretici firma logosu görüntülenecektir.

Cuppon
move precise_

Üretici Firma
Sinus Elektronik San. ve Tic. Ltd. Şti.

Revizyon Tarihi: 06.01.2025 / Revizyon No: 01